



## APEasyPower V1.2.0 Power Setting Instructions

### APsystems EMEA

Karspeldreef 8, 1101 CJ  
Amsterdam  
Phone: +31 (0)85 3018499  
Email: [info.emea@APsystems.com](mailto:info.emea@APsystems.com)  
[emea.APsystems.com](http://emea.APsystems.com)

### APsystems France

22 avenue Lionel Terray  
69330 Jonage  
France  
Phone: 031-10-2582670  
Email: [info.emea@APsystems.com](mailto:info.emea@APsystems.com)  
[emea.APsystems.com](http://emea.APsystems.com)

© All Rights Reserved

---

# Introduction

AP EasyPower v1.2.0 Update


- Added maximum power setting function for EZ1-M (power setting between 600W-800W)

---


# Maximum Power Setting

## 1. Enter the maximum power setting page

- ▶ Logging into AP EasyPower and enter the device list , click the device that needs to set its maximum power

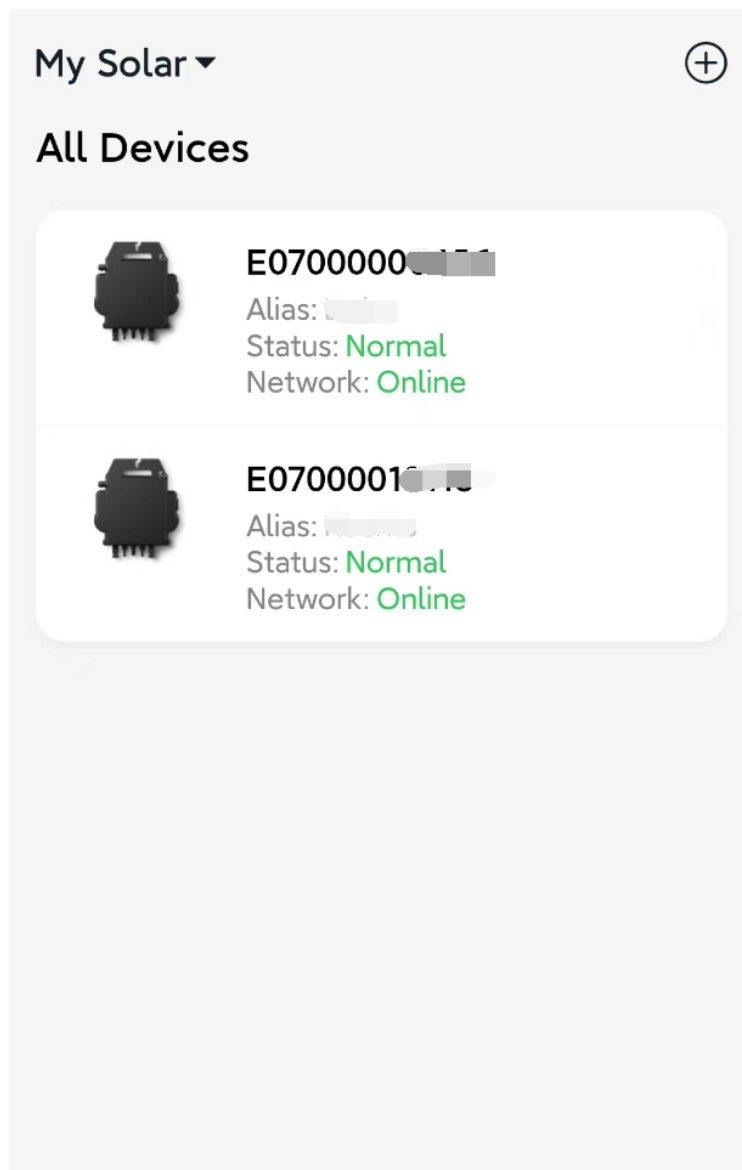


- ▶ Click the settings button in the upper right corner of the page and click into the device settings page

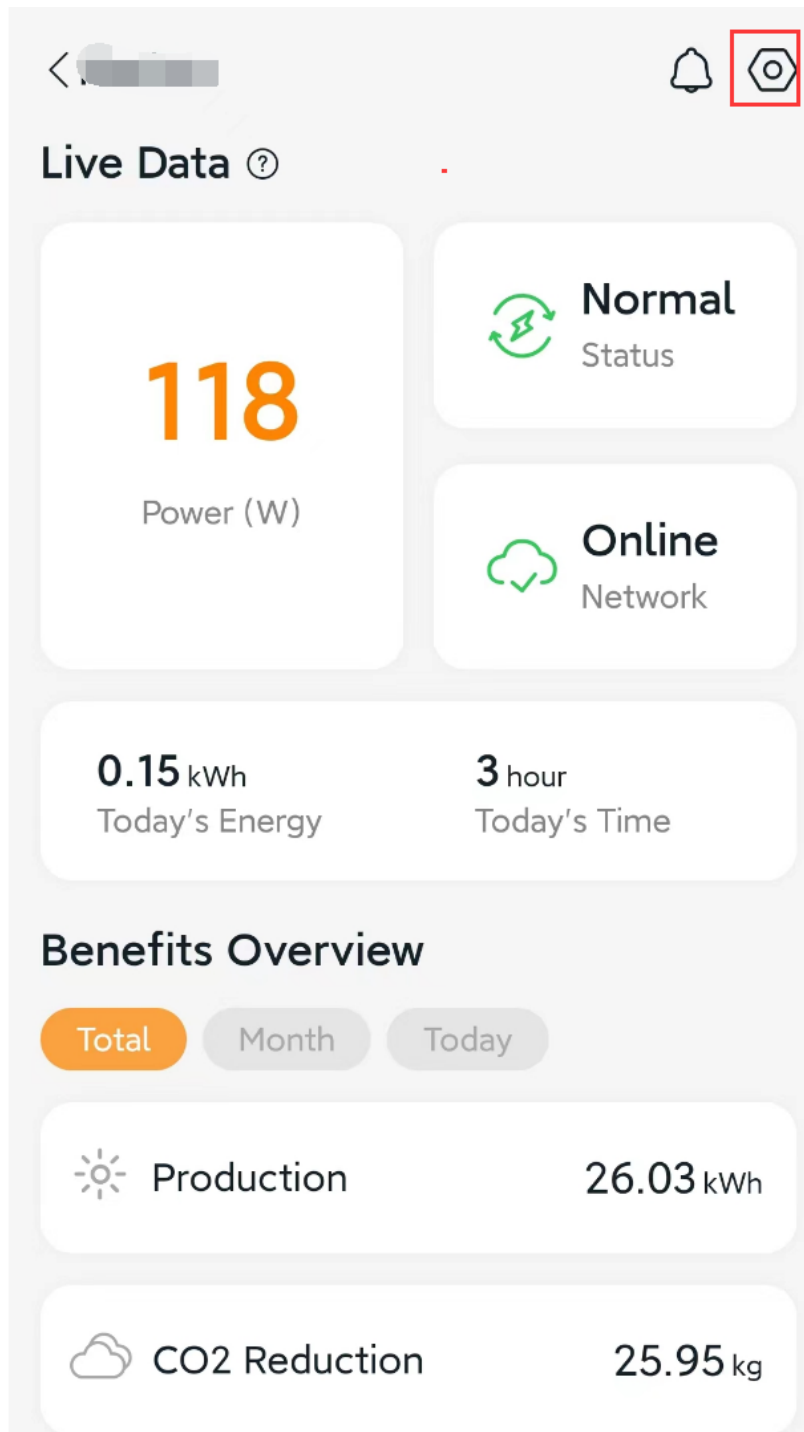

- 
- ▶ Click “Maximum Power” into maximum power setting page

## Settings



Device ID  
E07000C [blurred]

Alias  
[blurred]

>

Model Name EZ1

Bluetooth >

**Maximum Power** >


Remove Device

---

## 2. Set maximum power

- ▶ After entering the settings page, you can view the current maximum power and click to set it.

Drag the slider to set the maximum power, between 600W-800W. You can also click the "+" and "-" buttons to adjust, and click "OK" to send it to the device.

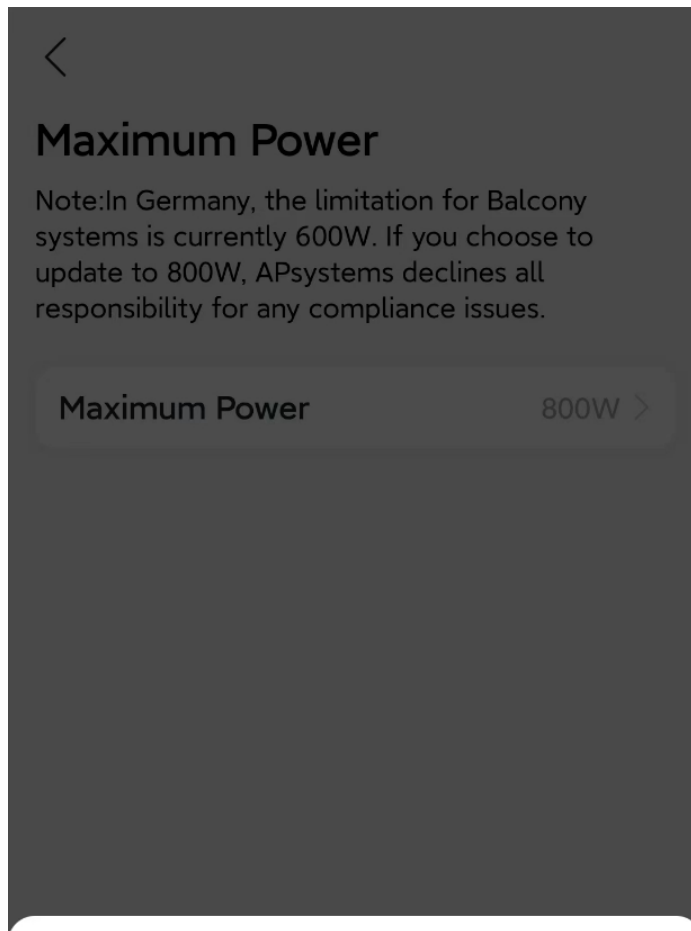

Set maximum power

